



120 / 508 SERIES

HD PREMIUM GRADE POCKET TRACK & HARDWARE INSTALLATION INSTRUCTIONS

USE WITH 1" TO 1 3/4" DOORS WEIGHING UP TO 150 LBS.

This hardware is used in conjunction with our 800 and our 1200 series track. The adjustable 2-wheel ball-bearing hanger is used for doors up to 100 lbs. and our 4-wheel ball-bearing hanger is used for doors up to 150 lbs. After 150 lbs. Additional 802 can be added to the center of the door to increase the capacity to 200 lbs.

**Pocket track length should be twice the opening - 1 inch.*

1. The first step is removing the old pocket door. You will have to remove the door stops (inside or outside) that are keeping your door from swinging when it is in the closed position. This usually consists of 1/4" round molding or another type of small wood trim. Once this is removed you will be able to disassemble the current hardware and remove the door.
2. After removing the old door you will now need to remove the old track. Remove all of the screws in the track that you are able to reach and then use a pry bar to pry the track down tearing out any screws that may be in the pocket area of the header.
3. Once the track is removed you are now ready to install the new track. The new track must be installed in the center of the header (If this is not done, then the door will rub on one of the sides when opening or closing). You must also place the track all of the way into the back of the pocket area leaving a gap at the opening to install the hardware into the track. When installing the new track to the header, install all of the screws that you can reach and then using an extra long screw driver or driver bit, install at least one screw in the pocket area of the header as far back into the pocket as possible.
4. Separate the 1224 door plate from the 122 or 802 by applying upward pressure on the door plate latch that is locking around the large adjusting screw. While applying the pressure upward towards the ball-bearing wheel, rotate the latch away from the screw unlocking it and swinging it away from the adjusting screw separating the 2 parts from each other.
5. Place the 122 or 802 hangers into the end of track.
6. Now you will need to attach the #1224 door plates to the top of your door. Mount the door plate 6" from the edge of the door on the pocket side and 2" from the edge of the door on the open side. The door plate should be installed using the screws that were supplied and with the wide portion of the plate facing the edge of the door.
7. Next, you will attach the door to the #122 or #802 hangers. Making sure that the latches are open on your #1224 door plates, lift the door up to the hanger on the pocket side and place the hangers adjusting screw into the slot of the door plate and then rotate the latch until it is locked. Once complete repeat this step for the opening side.
8. Adjust the hangers by tightening the hanger adjusting screw until the door is plum with the jamb and there is enough of a gap below the door for the door guide.
9. The last step is to install the #125 door guide at the bottom/center of the pocket area with the screws that were supplied.



DLP-PRESSRITE, INC.

2125 S.W. 60TH WAY • HOLLYWOOD, FL 33023 • 954-963-7373 • 800-243-7373 • FAX: 954-963-7377

120 / 508 SERIES



1200 ALUMINUM TRACK
SPLIT HEADER TRACK



802 4-WHEEL HANGER
WITH DOOR PLATE



122 2-WHEEL HANGER
WITH DOOR PLATE



704 ALIGNER / WRENCH




125 NYLON DOOR GUIDE




800 ALUMINUM
UNDER-HEADER
TRACK




1224 DOOR PLATE

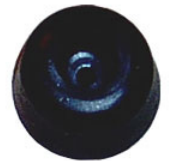

130 RUBBER BUMPER
(OPTIONAL)

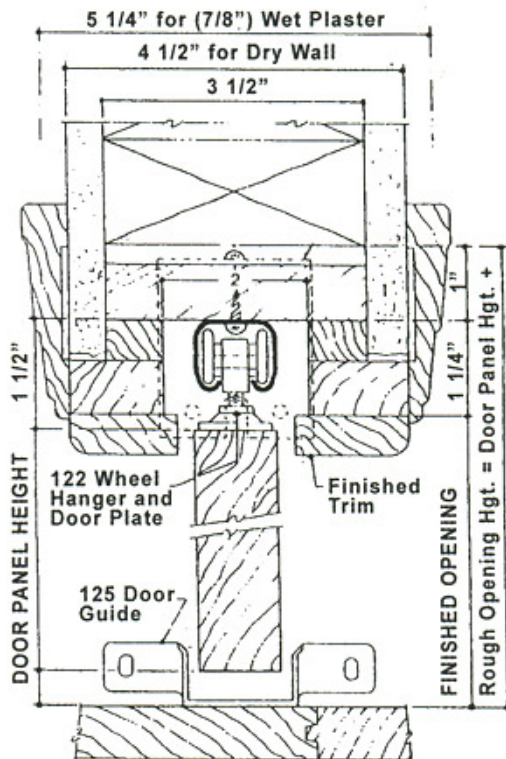

Series 800 Track
Pocket Door Detail
Under Header Installation

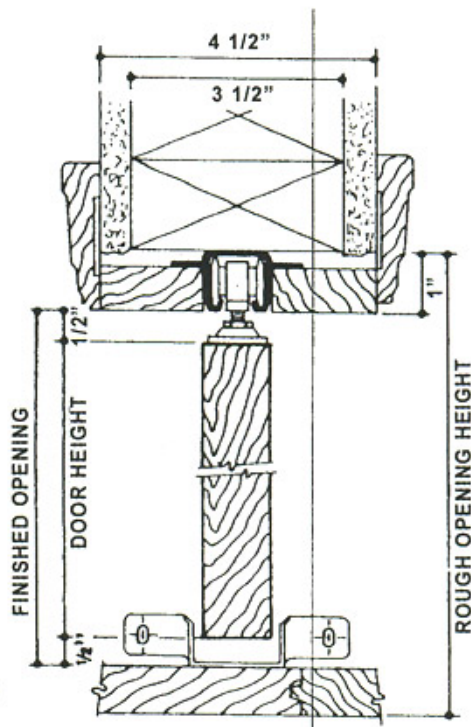

Series 1200 Track
Pocket Door Detail
Split Header Installation